



Assembly:

- 1) Glue this plan onto your chosen chipboard or cardstock material.
- 2) Cut out the pattern, being sure to crease only with a single pass of the knife where indicated with red dashed line
- 3) Fold up and assemble the main building, use a quality white glue like Sobo. We use elastic bands to hold things until dry.
- 4) Add a floor inside the bottom of the structure to square up the walls. Measure your diagonals to check for squareness, the diagonals should be the same number.
- 5) Glue the roof support to the back side of the false front, being sure to line up the support with the top and side edges of the false front check the front roof support with the height of the back of the building
- 6) Score and bend your roof to the expected angle and then glue on the roofing material and set aside
- 7) Glue the porch floor and roofing materials onto the porch chipboard blanks
- 8) Glue a larger piece of chipboard under the entire building that extends out the front of the building to support the porch area
- 9) Glue the paper building material onto the chipboard building blank from step 3, lining up the center window in the back with the back of the building. To get a thin even coat of glue: put glue onto the chipboard and use a scrap piece of chipboard to spread the glue out. Use a sharp craft knife and a metal ruler as a guide to cut the paper building materials.
- 10) Glue a scrap of roofing material onto the porch roof support and place the porch roof support on the front of the building above the front door
- 11) Glue on the main building roof
- 12) Glue the porch roof to the roof support. Slope the roof down slightly toward the front of the porch.
- 13) Purchase some balsa and cut two pieces of balsa wood to support the porch roof in the front, make these slightly shorter than the height of the porch roof so the roof slopes down.
- 14) Add chalk for weathering effects.

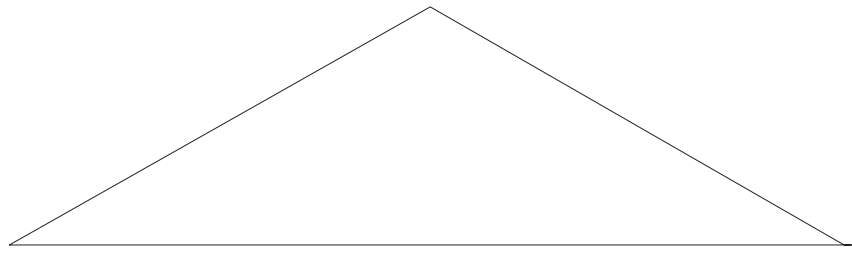

Roof Support

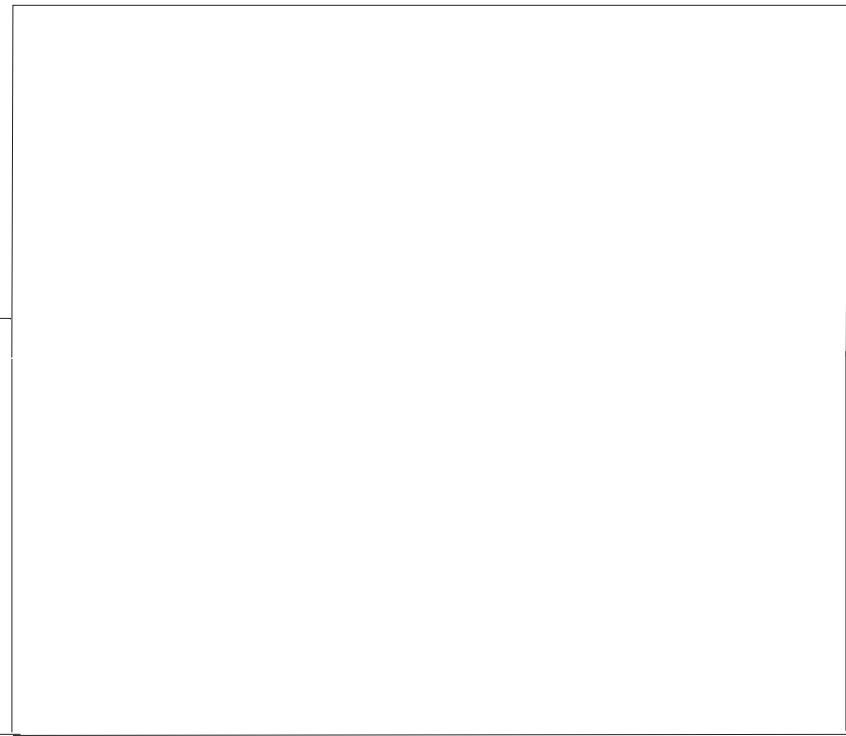

FRONT




SIDE 1


Print Building
Material
to this line

Cut Chipboard
to this line
(for .04" thickness
Chipboard)

 PORCH FLOOR



SIDE 2

 

Porch
Roof
Support







Main Roof

Single Pass with Knife.
Crease ONLY. Do not cut through.

www.ModelTrainSoftware.com

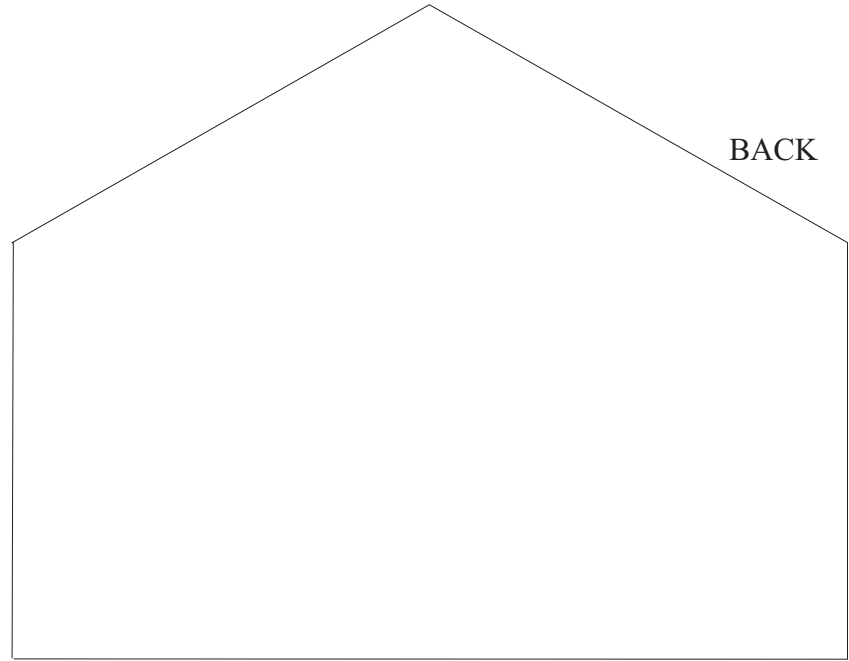

BACK

 

Porch Roof

